

iTB-3232

Basic Installation Instruction v1.6

Dear users, please go through the instructions in detail before the installation. Also, please preserve the manual properly and hand it to the actual operator of the machine.

CNC controllers are precision electronic devices. For the safety of both operators and the machine, please ensure all the tests, installations and adjustments are operated by professional electrical engineering personnel. For the description with "DANGER", "WARNING" and "CAUTION" in the manual, please read them in detail. If there are any concerns, please contact our branches in various regions. Our professionals are glad to be at your service.


Please comply with the following guidelines before finish reading the complete manual:

- The installing environment should be indoor and without water vapor, corrosive or flammable gas.
- Please operate the wirings according to the wiring diagram.
- The grounding must be strictly implemented and follow the current national electrician regulations. (References: NFPA 70: National Electrical Code,2005 Ed.)
- Do not modify the wirings while the device is powered up.

1. Safety Precautions:


Please pay extra attention to the following instructions while operating the product.	
<p>DANGER</p>	<ul style="list-style-type: none"> <li>■ Install the product by following the manual, or it might cause device damage.</li> <li>■ Do not operate the product in places exposed to water vapor, corrosive or flammable gas. It might cause device damage, electric shock, fire, or explosion.</li> <li>■ Do not install the product at a temperature exceeding the specified range. It might cause device damage or malfunctioning.</li> <li>■ Do not touch the internal circuits or components while the power is supplied to the controller to prevent electric shock or other damages.</li> <li>■ The internal circuit board of the controller is composed of CMOS ICs, which are vulnerable to static electricity. Do not touch the circuit board before taking precautionary measures.</li> <li>■ The product is for industrial use.</li> <li>■ Do not apply the device to the machines that might lead to casualties, device damage, or system shut down.</li> </ul>
<p>WARNING</p>	<ul style="list-style-type: none"> <li>■ Please cut off all the external devices when powering up the controller for the first time. The built-in testing PLC program may start the motor immediately after power up, which might be dangerous for the staffs around.</li> <li>■ The controller is a precision instrument. Please prevent non-maintenance staff or non-professional electronic control personnel from disassemble the device.</li> <li>■ Please apply the correct grounding loop to prevent signal errors.</li> <li>■ Please separate the signal cable of the controller from all the other motor and power cables by wiring trough to prevent the controller from the malfunctioning caused by large noise interference.</li> </ul>
<p>CAUTION</p>	<ul style="list-style-type: none"> <li>■ The CNC controller adopts microcomputer design. Please install the controller in a safe area and keep the area clean. Please keep iron shavings, wires, water, corrosive gases and liquid from the controller to avoid malfunctioning.</li> <li>■ Storage temperature range: -20°C~60°C Storage relative humidity range: 0%~90% and without condensation</li> <li>■ Operate temperature range: -10°C~55°C Please reserve a space of more than 55mm in width for ventilation and heat dissipation.</li> <li>■ The grounding of the controller and the machine tool system is necessary for leakage protection and prevention of lightning strikes. Please ensure the controller and the machine tool system are grounded properly before the installation.</li> <li>■ The controller should be installed with a power system operated below 24±20%. If the operating environment provides an unstable voltage source, please apply a voltage stabilizer so that the controller can function properly.</li> <li>■ Please turn off the power before plugging/unplugging the cables or modifying the wirings to prevent electric shocks and damage of the controller.</li> <li>■ Please make sure all the terminals are in the correct position during wiring to prevent damaging the machine caused by incorrect wiring.</li> <li>■ Do not touch the terminals within the 10 minutes after cutting off the power in case of that the residual voltage might cause electric shocks.</li> </ul>

2. Interface:

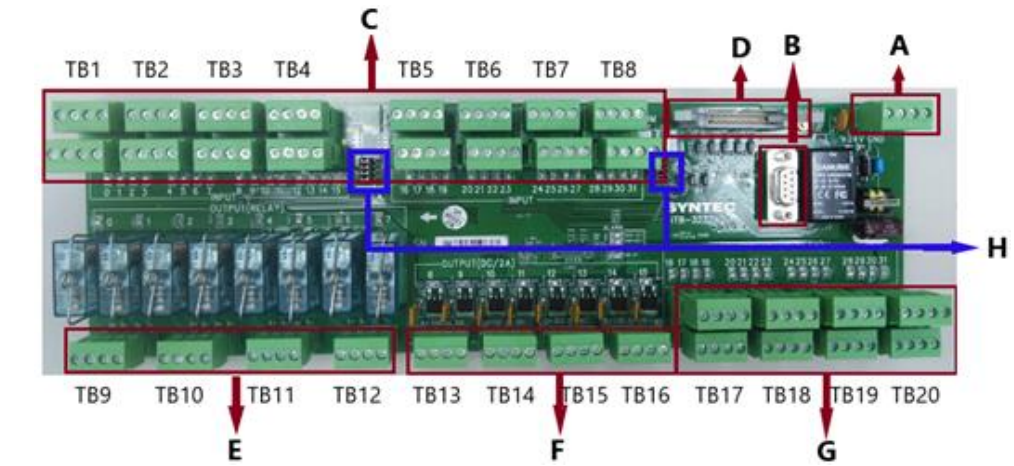


A	Power Input	24V input, best power supply: above 600W
B	RIO Port	Connect to Syntec Controller RIO interface
C	Input 0-31	32 sets of I point (I0-I31) Able to adopt SOURCE or SINK interface according to customers' hardware settings. 8sets of dual-row 8PIN terminals (terminal code: TB1-TB8)
D	Expansion I Point (I32-47)	16 sets of expansion I point (I32-I47) Able to expand Syntec input terminal
E	OUTPUT 0-7	8 sets of OUTPUT (O0-O7) Rated withstand voltage per set: +24V·16A 4 sets of 4PIN terminals (terminal code: TB9-TB12)
F	OUTPUT 8-15	8 sets of OUTPUT(O8-O15) Rated withstand voltage per set: +24V·2A 4 sets of 4PIN terminals (terminal code: TB13-TB16)
G	OUTPUT 16-31	16 sets of OUTPUT Rated withstand voltage per set: +24V·0.5A 4 sets of 8PIN terminals (terminal code: TB17-TB20)
H	Jump switch	Switch from NPN/PNP to Jump


**3. Structure Diagram: (Unit: mm)**  
(Top View)

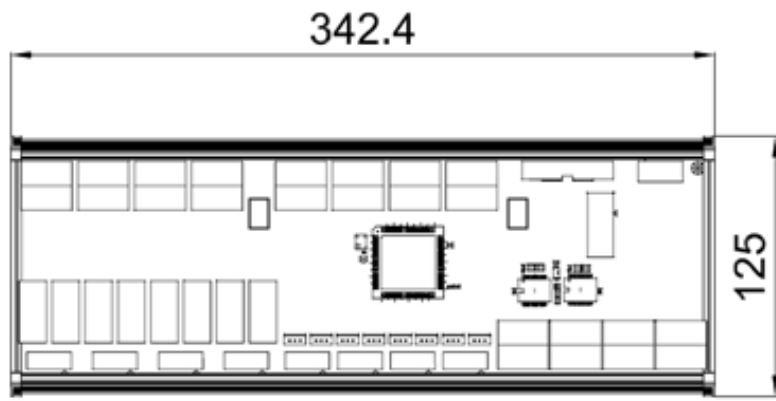


(Side View)

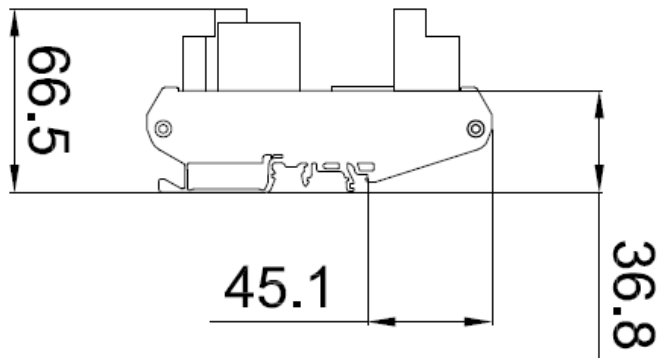


**4. Recommended Installation Diagram:**  
(Top View)

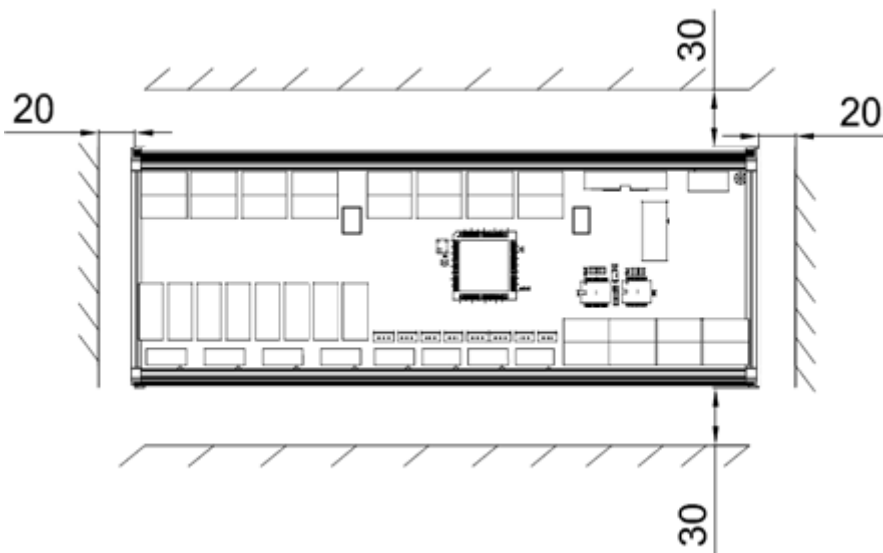

(Side View)

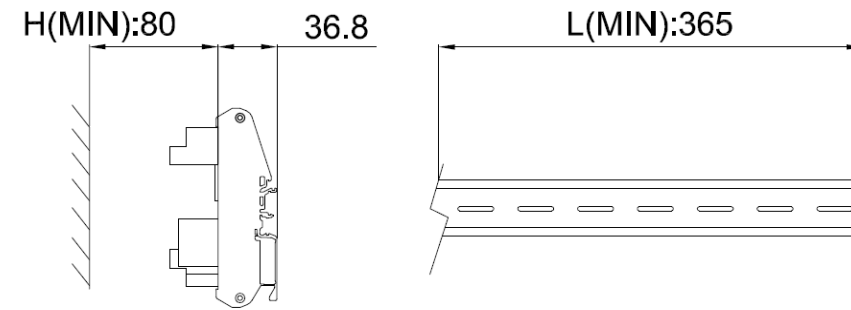

**5. Basic Installation Diagram:**

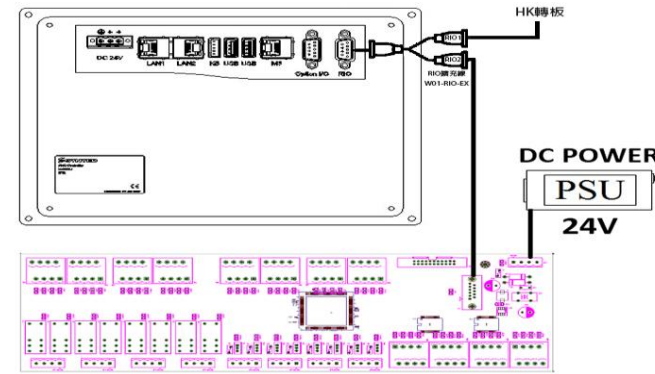

**6. Interface Configuration:**

Please notice the value and polarities of voltages.

- CN1 Connector Arrangement (I32-I47)
- 24V INPUT Connector Arrangement
- RIO Connector Arrangement

CN1	PIN	SIGNAL	PIN	SIGNAL
	1	X	2	X
	3	GND	4	GND
	5	IN39	6	IN47
	7	IN38	8	IN46
	9	IN37	10	IN45
	11	IN36	12	IN44
	13	IN35	14	IN43
	15	IN34	16	IN42
	17	IN33	18	IN41
	19	IN32	20	IN40

24V INPUT	PIN	SIGNAL
1	1	+24V
2	2	+24V
3	3	GND
4	4	GND

● RIO Connector Arrangement

RIO	PIN	SIGNAL	PIN	SIGNAL
	1	RIO-RX+	6	--
	2	RIO-RX-	7	--
	3	RIO-TX+	8	--
	4	RIO-TX-	9	--
	5	--		

- TB1-TB8 Connector Arrangement (I0-I31 input, 8 sets of dual-row 8PIN terminals. The remaining I Points of TB5-TB8 are set likewise.)

PNP Status

接頭編號	TB1	TB2	TB3	TB4
歐規端子	PIN	SIGNAL	SIGNAL	SIGNAL
1	1	IN3	IN7	IN11
2	2	+24V	+24V	+24V
3	3	IN2	IN6	IN10
4	4	+24V	+24V	+24V
5	5	IN1	IN5	IN9
6	6	+24V	+24V	+24V
7	7	IN0	IN4	IN8
8	8	+24V	+24V	+24V

NPN Status

接頭編號	TB1	TB2	TB3	TB4
歐規端子	PIN	SIGNAL	SIGNAL	SIGNAL
1	1	IN3	IN7	IN11
2	2	0V	0V	0V
3	3	IN2	IN6	IN10
4	4	0V	0V	0V
5	5	IN1	IN5	IN9
6	6	0V	0V	0V
7	7	IN0	IN4	IN8
8	8	0V	0V	0V

- TB9-12 Connector Arrangement (O0-O7 output, 4 sets of terminals)

接頭編號	TB9	TB10	TB11	TB12
歐規端子	PIN	SIGNAL	SIGNAL	SIGNAL
1	1	OUT1-	OUT3-	OUT5-
2	2	OUT1+	OUT3+	OUT5+
3	3	OUT0-	OUT2-	OUT4-
4	4	OUT0+	OUT2+	OUT4+

- TB13-16 Connector Arrangement (O8-O15 output, 4sets of 4PIN terminals)


接頭編號	TB13	TB14	TB15	TB16
歐規端子	PIN	SIGNAL	SIGNAL	SIGNAL
1	1	GND	GND	GND
2	2	OUT9+	OUT11+	OUT13+
3	3	GND	GND	GND
4	4	OUT8+	OUT10+	OUT14+

- TB17-20 Connector Arrangement (O16-O31 output, 4 sets of 8PIN terminal)

接頭編號	TB17	TB18	TB19	TB20
歐規端子	PIN	SIGNAL	SIGNAL	SIGNAL
1	1	OUT16	OUT20	OUT24
2	2	GND	GND	GND
3	3	OUT17	OUT21	OUT25
4	4	GND	GND	GND
5	5	OUT18	OUT22	OUT26
6	6	GND	GND	GND
7	7	OUT19	OUT23	OUT27
8	8	GND	GND	GND


## 7. Interface Specifications :

### ● INPUT0~31 Input Interface Layout NPN Interface

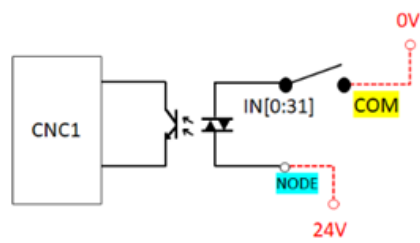


● 實心圓點為歐規端子接點

### PNP Interface Layout

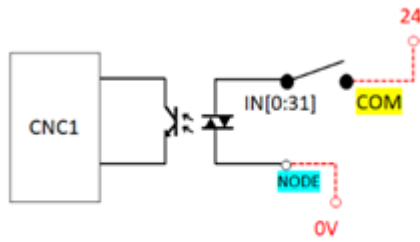


● 實心圓點為歐規端子接點


### ● INPUT32~47 Input Interface Layout

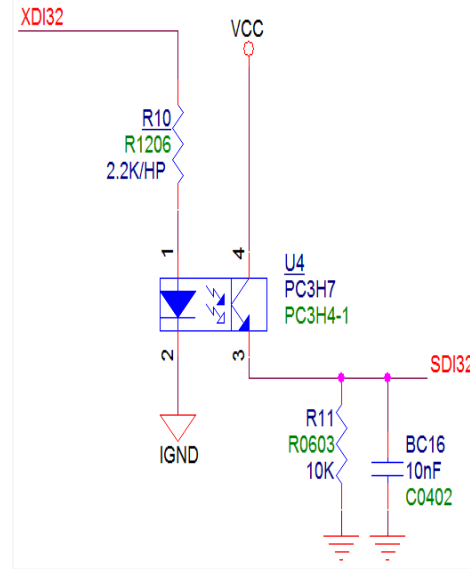

### ● OUTPUT0~7 Input Interface Layout

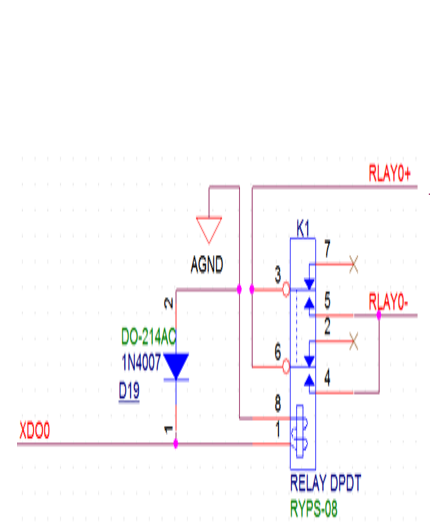


### ● OUTPUT16~31 Input Interface Layout

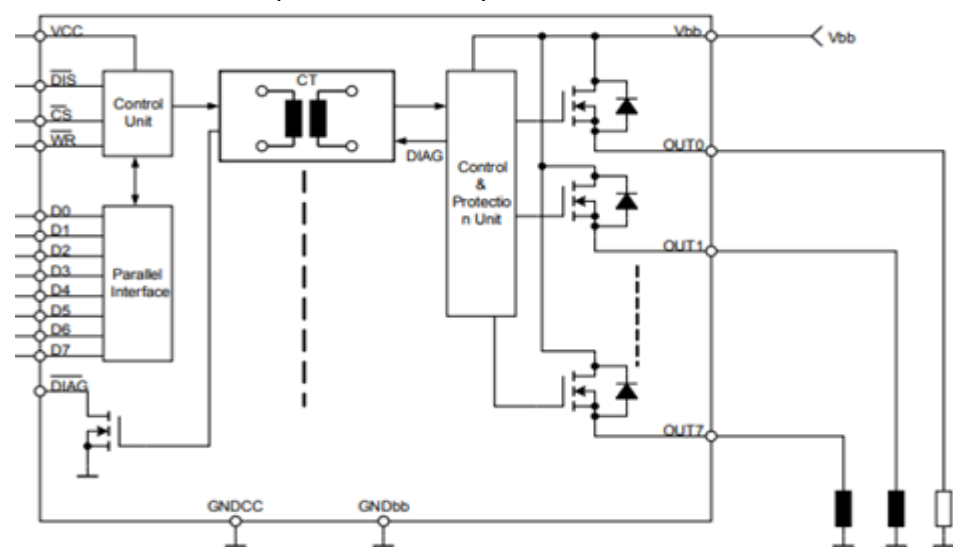

## 8. Wiring Notifications:

- Please connect the ground wire to class-3 (under 100Ω). Poor grounding might cause signal error, electric shock, or fire.
- When using a solenoid valve or other inductive loads, please apply an arc extinguisher or RC voltage dependent resistor RC to ensure the life of the contact points. Advantages of the arc extinguisher:
  - 1) Extend the life of electrical contacts.
  - 2) Reduce the sparks from the contact points.
  - 3) Prevent the inductive loads from interferences caused by back EMF
  - 4) Restrain the impulse voltage.
- Do not connect with other cables to extend the original length to prevent signal failures or malfunctioning.
- If the server line you are using is not a standard Syntec cable, please check all the terminals and make sure they are connected properly before running a test. Incorrect wiring may cause output command failures and malfunctioning.
- The external 24V power supply used in wiring should be certificated and protective to avoid the malfunction caused by wiring mistakes. (Recommendation standard : fulfill requirements of both EN60950 and UL1950)
- Please crimp or weld the wire connections while doing the wirings.
- In case of the use of Ethernet, to prevent the internet congestion and noise, the CAT5e or CAT6 cable are recommended.
- Do not use counterfeit terminal strips. Those terminal strips cannot provide overall protection for the system. The quality is also not guaranteed and prone to cause electrical control problems of the machine tools.
- Grounding Directions:
  - 1) The length of the grounding wire should follow the electrical equipment regulations. The shorter the better.
  - 2) The grounding wire of the controller should be separated from those with large current loading such as electric welders or high frequency motors.
  - 3) Please refer to the pictures below when the controller is grounded with multiple electrical control devices. Do not make it a loop.

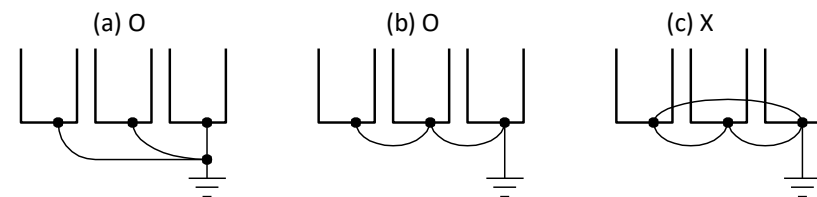

## 8. Waste Disposal Advice



- 1) When a product comes to the end of its life, please recycle it in conformity with the local regulations and treat it as industrial waste.
- 2) To recycle a product, we usually sort the components into steel shavings, electrical parts, etc.; then we sell them to licensed industrial waste management companies.
- 3) The batteries of the products should be recycled according to the local law.